

# Coolpad Surf Mobile Hotspot



## User Manual

### Device Layout



- **Power key:** Hold the Power key for 3 seconds to power the device on/off. When the screen is off, press the Power key to turn the screen on.
- **WPS key:** Hold the WPS key for 3 seconds to activate the WPS function. Once activated, the Wi-Fi™ LED indicator will flash every two seconds. If the network is not accessed within 2 minutes, the device will automatically exit WPS (Wi-Fi Protected Setup) mode.
- **LED indicators:** Display network signal, Wi-Fi, SMS, battery charge and mobile data status.
- **USB port:** Use the USB port to charge your device via the USB cable.
- **Reset:** Hold both the Power key and the WPS key simultaneously for 15 seconds. All LED indicators will flash green 4 times to indicate that the device has been reset to factory default settings.
- **Reboot:** Hold the Power key for 10 seconds to restart your device.

### On-Screen Indicators

Indicators	Description
Network	Displays your current network status. Green light indicates good network connection; yellow light indicates poor network connection; red light indicates no network connection, no SIM card, or no service.
Wi-Fi	Indicates when Wi-Fi is connected.
SMS	Indicates when there is a new message.
Battery	Displays your current battery status. Solid green light indicates the battery level is 40%-100%, solid yellow light indicates the battery level is 16%-39%, and solid red light indicates the battery level is less than 15%; when the device is charging, the indicator will flash red when the battery level is below 15%, will flash yellow when the battery level is 16%-39%, and will flash green when the battery level is 40%-100%.
Data	Indicates when your data allotment is running out. The indicator will flash red when the data usage is higher than 75% of the monthly data plan set, will flash yellow when the data usage is 51%-75%, and will flash green when the data usage is below 50%. You will need to configure your monthly data plan and tick the "Auto Disconnected" box on Web User Interface first.

### Charging Your Mobile Hotspot

1. Connect the microUSB end of the USB cable to the USB port on your device.
2. Connect the other end to the travel adapter.
3. Connect the travel adapter to an electrical outlet to fully charge your device.

Note: You can also charge the device by connecting it to a computer with the USB cable.

### Connecting Your Wi-Fi Device to Your Mobile Hotspot

1. Power on your mobile hotspot.
2. On your computer or other Wi-Fi enabled device, search for available Wi-Fi networks and select network name (SSID) located on label on back panel of your mobile hotspot.

Note: Wi-Fi name (SSID) and Wi-Fi Password are located on the label inside the back cover of the device.

- From a Windows computer: Left-click **Wireless Network Connection** on the task bar to view available networks. Choose the SSID from the list of available networks.
- From a Mac computer: Select **System Preferences > Network**. Choose the SSID from the list of available networks.
- From an iOS device: Go to **Settings > Wi-Fi**. Choose the SSID from the list of available networks.
- From an Android device: Go to **Settings > Wi-Fi**. Choose the SSID from the list of available networks.

3. Enter the password located on label on back panel and click **OK**.

### Using the WPS

If your Wi-Fi device supports WPS, you do not have to input the password manually after a WPS connection has been established. Please follow the following steps:

1. Power on your Mobile Hotspot and enable the Wi-Fi function from the device you would like to connect.
2. Press and hold the WPS key on your device for 3 seconds to start the Wi-Fi Protected Setup authentication process.
3. Enable the WPS function on your Wi-Fi device in order to respond to this authentication process.
4. Follow the system prompts on your Wi-Fi device to finish the connection.
5. If no Wi-Fi device is connected within 2 minutes, the WPS function will automatically turn off.